

**PARTS LIST**  
**SUPPLEMENT**  
for the  
**SUNBEAM**  
**“260” and “289”**

**Commencing Chassis Numbers**

**Mk. I, B9470001 and B382000001**

**Mk. II, B392000001**

This publication supersedes and cancels Supplement 6601131 dated January, 1965 covering the Sunbeam “260”.

This Supplement to be inserted at the front of the Sunbeam Alpine parts list No. 6600992, and to be used in conjunction with parts list No. 6600992.

---

Issued by

**ROOTES MOTORS (PARTS) LTD., BIRMINGHAM 10**

---

# INDEX TO SECTIONS

For Descriptive Index see pages iv and v

ENGINE (Motor) — MARK I	AF
ENGINE (Motor) — MARK II	AAF
PETROL (Fuel) PUMP	BF
CARBURETTOR — MARK I	CF
CARBURETTOR — MARK II	CAF
CARBURETTOR CONTROLS	DF
CLUTCH AND CONTROLS	FF
GEARBOX (Transmission) UNIT and GEAR SHIFT CONTROL	GF
SUSPENSION — FRONT	MF
REAR AXLE and ROAD WHEELS	NF
PROPELLOR SHAFT	PF
BRAKES AND CONTROLS	QF
STEERING and CONTROLS	RF
SUSPENSION — REAR	SF
RADIATOR	TF
PETROL (Fuel) SYSTEM	UF
EXHAUST SYSTEM	VF
ELECTRICAL EQUIPMENT	WF
BODY MOUNTING	XF
BODY FITTINGS	YXF
SPECIAL ACCESSORIES	ZUF
TOOLS	ZVF
PARTS and SERVICE PUBLICATIONS	ZXF
NUMERICAL INDEX	ZZF

INDEX

# INDEX

	Page No.
<b>AXLE — REAR AND ROAD WHEELS</b>	
Axle Casing ... ..	NF1
Axle Shaft ... ..	NF1
Crown Wheel (Ring Gear) and Bevel Pinion	NF1
Differential Components ... ..	NF1
Driver Coupling (Companion Flange) ...	NF1
Hubs c/w Bolts ... ..	NF2
Road Wheels ... ..	NF2
Panhard Rod ... ..	NF2
Wheel Trim ... ..	NF2
<b>BODY FITTINGS</b> ... ..	YXF1 - YXF4
<b>BODY MOUNTING</b> ... ..	XF1
<b>BRAKES AND CONTROLS</b>	
Brake Fluid ... ..	QF2
Brake Pipes ... ..	QF1
Brake Pedal ... ..	QF2
Hose ... ..	QF2
<b>CARBURETTOR — MARK I</b> ... ..	CF1 - CF3
Gasket Set ... ..	CF3
Repair Kit ... ..	CF3
Tune-up Kit ... ..	CF3
<b>CARBURETTOR — MARK II</b> ... ..	CAF1 - CAF2
Gasket Set ... ..	CAF2
Repair Kit ... ..	CAF2
Tune-up Kit ... ..	CAF2
<b>CARBURETTOR CONTROLS (R.H.D.)</b> ...	DF1
<b>CARBURETTOR CONTROLS (L.H.D.)</b> ...	DF2
<b>CLUTCH AND CONTROLS</b>	
Clutch Cover ... ..	FF1
Clutch Pedal ... ..	FF1
Master Cylinder ... ..	FF1 - FF2
Slave Cylinder ... ..	FF1
<b>ELECTRICAL EQUIPMENT</b>	
Alternator ... ..	WF3 - WF4
Battery ... ..	WF6
Cables and Grommets ... ..	WF7
Distributor ... ..	WF4 - WF6
Dynamo (Generator) ... ..	WF3
Horn ... ..	WF7
Ignition Coil ... ..	WF6
Instruments ... ..	WF1
Spark Plugs ... ..	WF6
Starter Motor ... ..	WF2
Starter Relay ... ..	WF1
Voltage Regulator ... ..	WF1

	Page No.
<b>ENGINE (Motor) — MARK I</b>	
Air Cleaner ... ..	AF6
Big End Bearing ... ..	AF1
Conn. Rod ... ..	AF1
Camshaft ... ..	AF3
Camshaft Bearing Kit ... ..	AF3
Crankshaft ... ..	AF3
Cylinder Block ... ..	AF1
Cylinder Head ... ..	AF4
Exhaust Valve ... ..	AF4
Fan Belt ... ..	AF6
Fan Blade ... ..	AF6
Flywheel and Starter Ring (Gear) ...	AF3
Gasket Sets ... ..	AF8
Inlet Valve ... ..	AF4
Main Bearing Set ... ..	AF1 - AF2
Manifolds ... ..	AF5
Mountings—Engine (Motor) ... ..	AF7
Oil Filter Element ... ..	AF4
Oil Pump ... ..	AF3
Pistons ... ..	AF1
Rocker Arm ... ..	AF5
Suction Pipe—Distributor Auto Control	AF6
Sump ... ..	AF4
Thermostat ... ..	AF5
Timing Cover ... ..	AF1
Water Pump ... ..	AF5
Ventilation—Crankcase ... ..	AF7
<b>ENGINE (Motor) — MARK II</b>	
Air Cleaner ... ..	AAF6
Big End Bearing ... ..	AAF1
Conn. Rod ... ..	AAF1
Camshaft ... ..	AAF3
Camshaft Bearing Kit ... ..	AAF3
Crankshaft ... ..	AAF3
Cylinder Block ... ..	AAF1
Cylinder Head ... ..	AAF4
Exhaust Valve ... ..	AAF5
Fan Belt ... ..	AAF7
Fan Blade ... ..	AAF7
Flywheel and Starter Ring (Gear) ...	AAF3
Gasket Sets ... ..	AAF8
Inlet Valve ... ..	AAF4
Main Bearing Set ... ..	AAF1 - AAF2
Manifolds ... ..	AAF5
Mountings—Engine (Motor) ... ..	AAF8
Oil Filter Element ... ..	AAF4
Oil Pump ... ..	AAF3
Pistons ... ..	AAF1
Rocker Arm ... ..	AAF5
Suction Pipe—Distributor Auto Control	AAF7
Sump ... ..	AAF4
Thermostat ... ..	AAF5
Timing Cover ... ..	AAF1
Water Pump ... ..	AAF5
Ventilation—Crankcase ... ..	AAF8

	Page No.
<b>EXHAUST SYSTEM</b> ... ..	VF1
<b>GEARBOX (Transmission) UNIT</b>	
1st Speed Wheel ... ..	GF1
2nd Speed Wheel ... ..	GF1
3rd Speed Wheel ... ..	GF1
Baulking Rings ... ..	GF1
Cross Tube, Rear Engine Mounting	GF4
Gearshift Lever Assembly ... ..	GF4
Insulator—Rear Mounting ... ..	GF4
Layshaft Cluster (Countershaft Gears)	GF2
Mainshaft ... ..	GF1
Input (Primary) Shaft (Stemwheel) ... ..	GF1
Reverse Idler Wheel (Gear) ... ..	GF2
Rods—Gear Shift ... ..	GF3
Selector Forks ... ..	GF3
Speedometer Cables ... ..	GF3
Speedometer Driving Wheel (Gear) ... ..	GF2
Speedometer Driving Pinion ... ..	GF3
Top Cover ... ..	GF2
<b>NUMERICAL INDEX</b> ... ..	ZZF
<b>PARTS AND SERVICE PUBLICATIONS</b> ...	ZXF1
<b>PETROL (Fuel) PUMP</b> ... ..	BF1 - BF2
Mountings ... ..	BF2
<b>PETROL (Fuel) SYSTEM</b> ... ..	UF1

	Page No.
<b>PROPELLOR SHAFT</b> ... ..	PF1
<b>RADIATOR</b> ... ..	TF1
<b>SUSPENSION — FRONT</b>	
Coil Spring ... ..	MF1
Crossmember ... ..	MF1
Lower Links ... ..	MF1
Steering Arms ... ..	MF1
<b>SUSPENSION — REAR</b>	
Shock Absorber ... ..	SF1
Spring—Road ... ..	SF1
<b>STEERING AND CONTROLS</b>	
Cowls—Steering Column ... ..	RF2
Handwheel ... ..	RF2
Rack and Pinion ... ..	RF1
Support Bracket ... ..	RF2
Universal Steering Joint ... ..	RF1
Upper Column ... ..	RF1
<b>SPECIAL ACCESSORIES</b> ... ..	ZUF1
<b>TOOLS</b> ... ..	ZVF1