


EXHAUST SYSTEM

2393

SECTION VF


EXHAUST SYSTEM

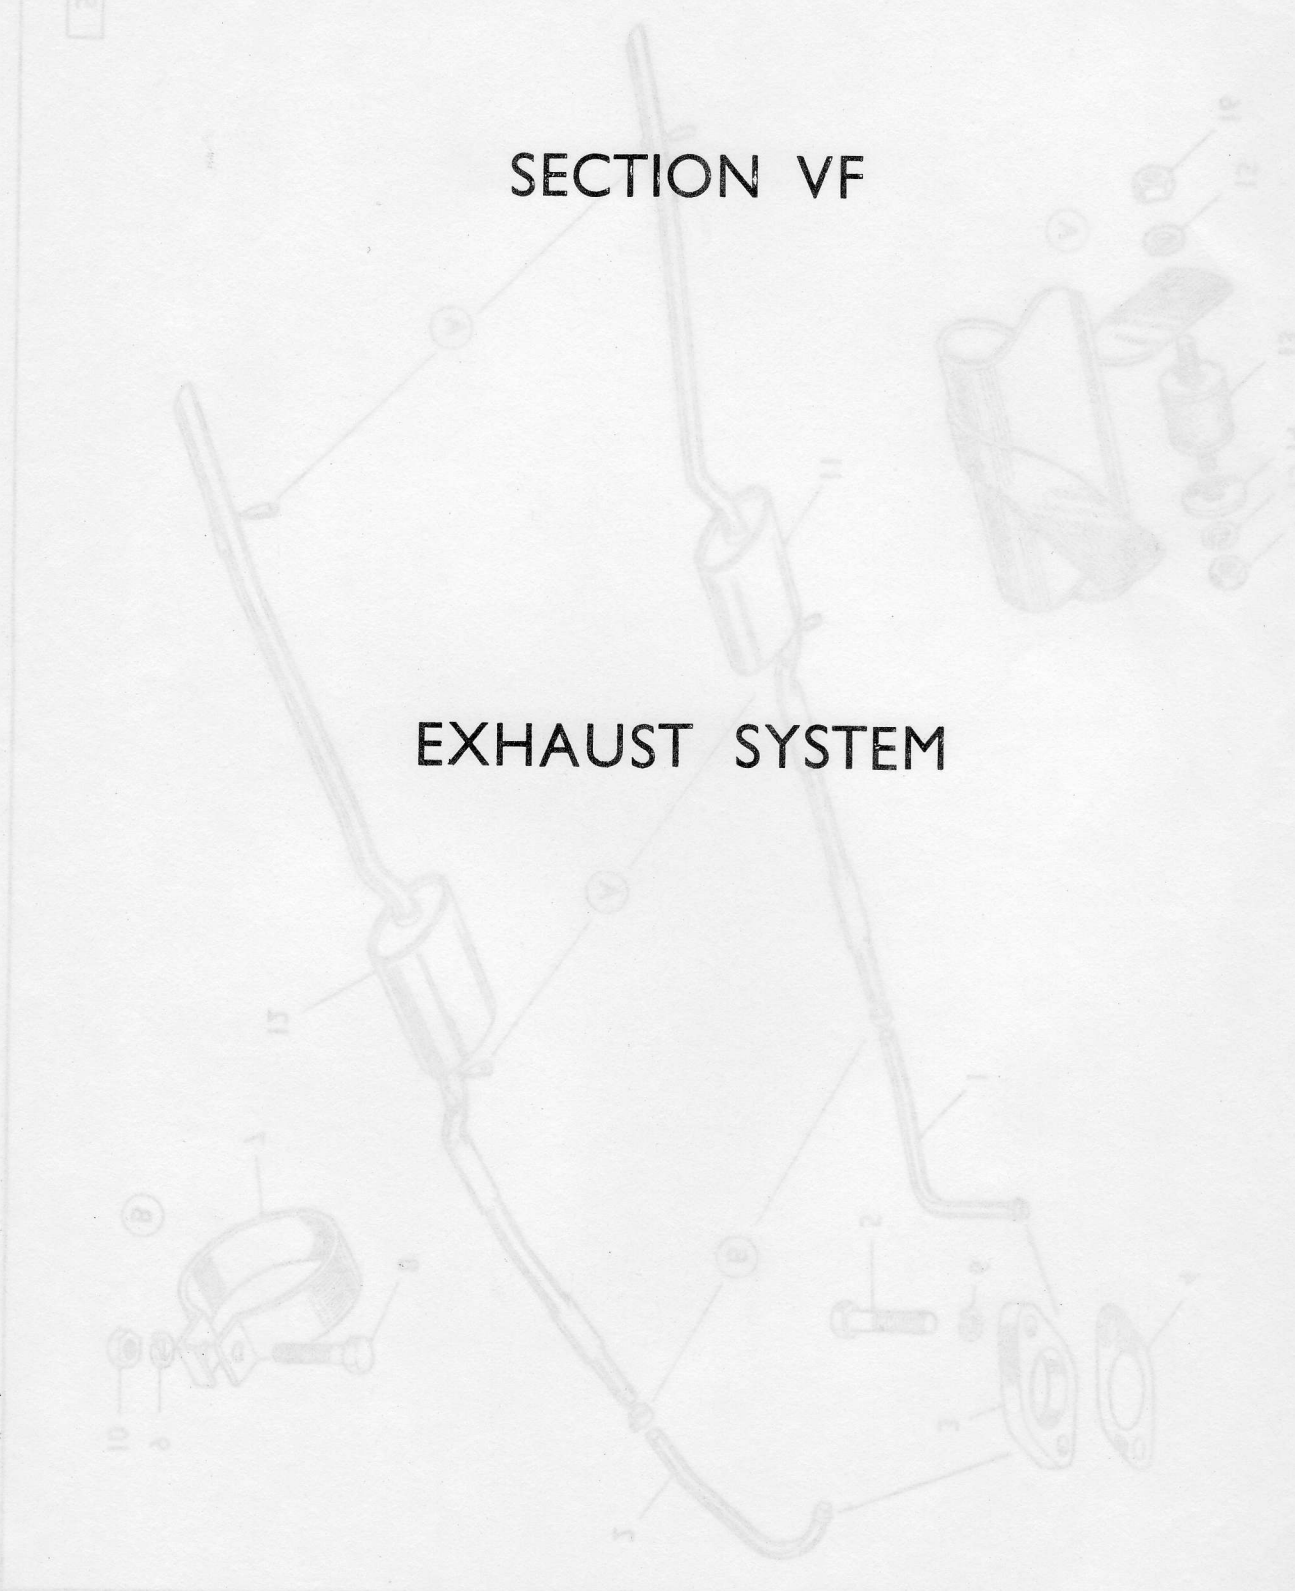

SECTION VF

EXHAUST SYSTEM

5363

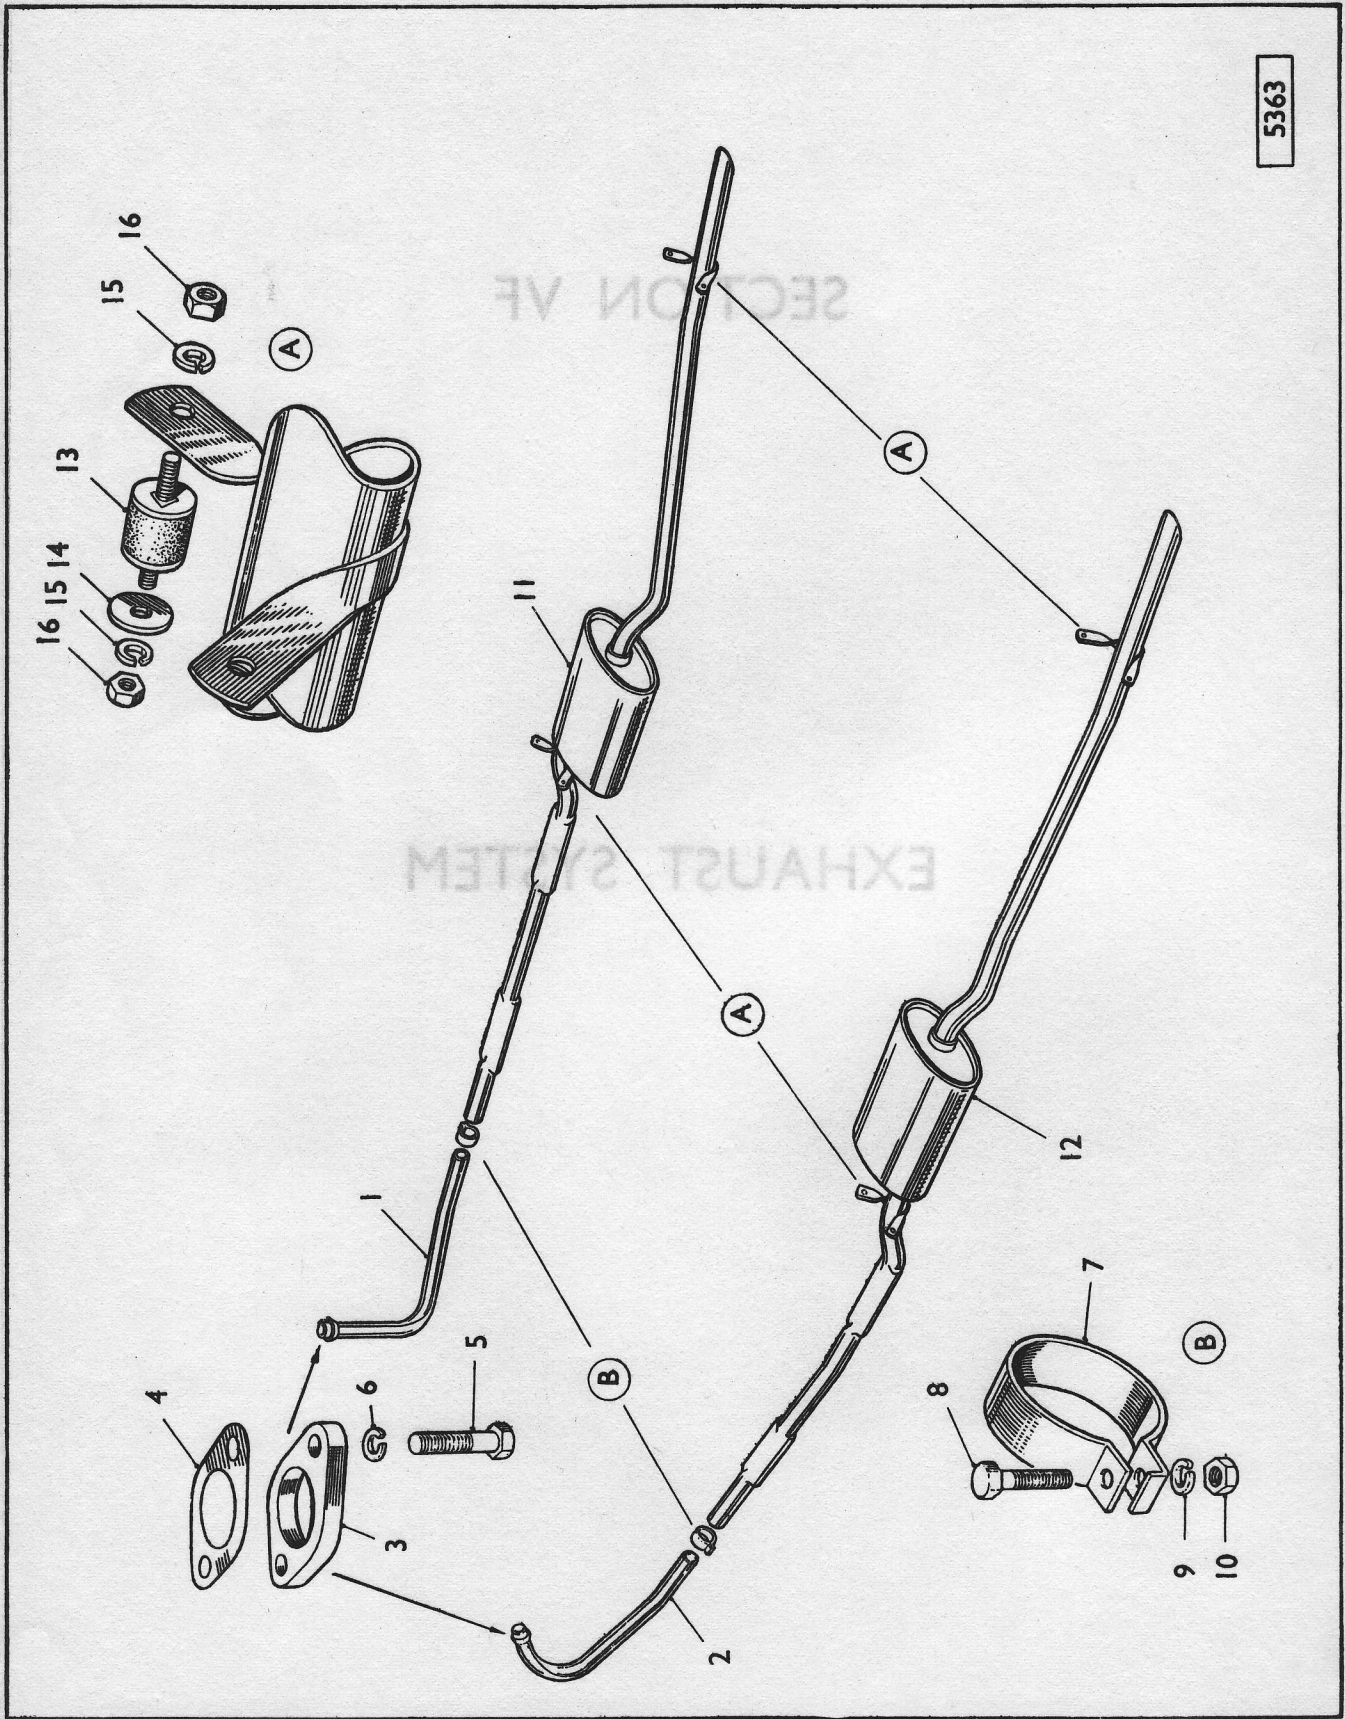

SECTION VF

EXHAUST SYSTEM

Plate Ref.	Rootes Part Number	DESCRIPTION	No. per Veh.	REMARKS
1	1224630	PRIMARY PIPE, O/S (R.H.)	1	
2	1224631	PRIMARY PIPE, N/S (L.H.)	1	
3	6100045	Flange—Primary pipes	2	
4	6100046	Gasket—Exhaust manifold to primary pipe (Asbestos) ...	2	
5	19407111	Screw, $\frac{7}{16}$ " UNC. \times $1\frac{3}{8}$ " } Primary pipes	4	
6	9660282	Washer, $\frac{7}{16}$ " spring } to manifolds	4	
7	9182041	Clip	2	
8	19505081	Screw, $\frac{5}{8}$ " UNF. \times 1" } Primary pipes to	2	
9	9660201	Washer, $\frac{5}{8}$ " spring } exhaust pipes	2	
10	5220701	Nut, $\frac{5}{8}$ " UNF.	2	
11	1224774	EXHAUST PIPE AND SILENCER, O/S (R.H.)	1	} R.H.D. also L.H.D. U.S.A. and Canada
12	1224775	EXHAUST PIPE AND SILENCER, N/S (L.H.)	1	
	1229862	EXHAUST PIPE AND SILENCER, O/S (R.H.)	1	} L.H.D. except U.S.A. and Canada
	1229863	EXHAUST PIPE AND SILENCER, N/S (L.H.)	1	
13	P.113421	Support rubber }	8	
14	9067043	Washer, $\frac{3}{8}$ " plain } Exhaust pipe and	8	
15	9661241	Washer, $\frac{3}{8}$ " spring } silencer mounting	16	
16	5220703	Nut, $\frac{3}{8}$ " UNF. }	16	