

SECTION DF

CARBURETTOR CONTROLS


S·H·D

T·H·D

SECTION DF

CARBURETTOR CONTROLS

Publication No. 6601334

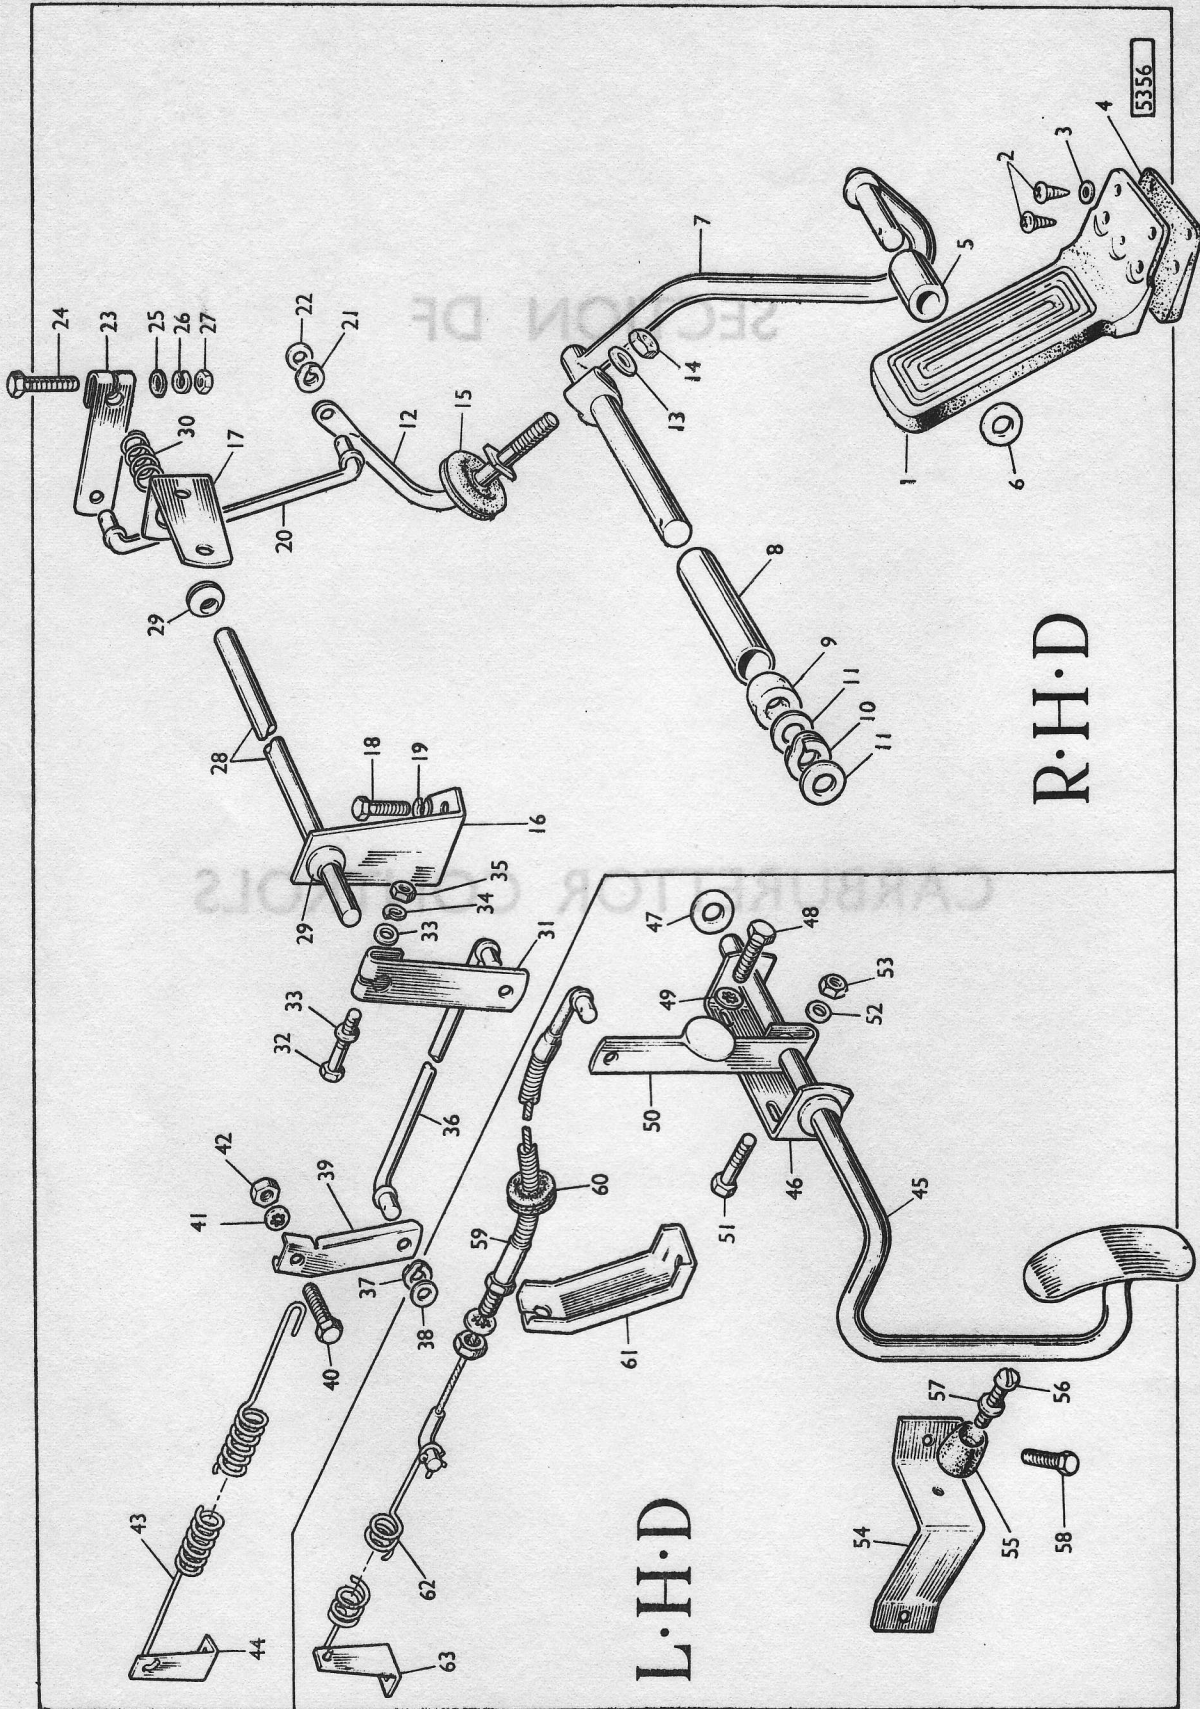

R·H·D

L·H·D

SECTION DF

CARBURETTOR CONTROLS

Plate Ref.	Rootes Part Number	DESCRIPTION	No. per Veh.	REMARKS
ACCELERATOR (R.H.D.)				
1	1206352	ACCELERATOR PEDAL	1	
2	9775089	Tapping screw, No. 12 × ½"	2	Up to B9473714
3	9067017	Washer, No. 12 plain	2	
	9772086	Tapping screw, No. 6 × ½"	A/R	Up to B9473714
	1236093	Spacer	1	
	9775109	Tapping screw, No. 12 × ¾"	3	} From B9473715
4	1228282	Packing piece (rubber)	1	
5	1215191	Roller—Accelerator	1	
6	9067034	Washer, ⅜" plain—Roller	2	
7	1229828	ACCELERATOR CROSS SHAFT ASSEMBLY	1	Up to B9473714
	1236047	ACCELERATOR CROSS SHAFT ASSEMBLY	1	From B9473715
8	1200356	Distance piece—Cross shaft	1	
9	9120051	Washer, felt	1	
10	9086011	Washer, ½" spring } Pedal shaft	1	
11	9067056	Washer, ½" plain }	2	
12	1200455	Operating lever	1	
13	9067023	Washer, ⅜" plain } Lever to	1	
14	9552053	Nut, ⅜" U.N.F., Nyloc } shaft	1	
15	1045489	Grommet—Operating lever	1	
16	1229840	Mounting bracket—Cross shaft to engine (motor)	1	
17	1229841	Mounting bracket—Cross shaft to bulkhead	1	
18	19605041	Screw, ⅜" U.N.F. × ½" } Bracket to	2	
19	5200485	Washer, ⅜" spring } engine (motor)	2	
20	1229838	Control rod—Operating lever	1	
21	9662122	Washer, ⅜" spring } Rod to	2	
22	9067008	Washer, ⅜" plain } lever	2	
23	1229830	Lever } Carb to	1	Up to B9473714
	1236051	Lever } cross shaft	1	
24	19503081	Screw, No. 10 U.N.F. × 1"	1	
25	9067009	Washer, ⅜" plain	1	
26	9660122	Washer, ⅜" spring	1	
27	5220700	Nut, No. 10 U.N.F.	1	
28	1229831	CROSS SHAFT	1	
29	1229832	Bearing—Cross shaft	2	
	9067034	Washer, ⅜" plain	2	
30	1229833	Compression spring	1	
31	1229834	Lever } Cross shaft to	1	Up to B9473714
	1236052	Lever } operating lever	1	
32	19503081	Screw, No. 10 U.N.F. × 1"	1	
33	9067009	Washer, ⅜" plain	2	
34	9660122	Washer, ⅜" spring	1	
35	5220700	Nut, No. 10 U.N.F.	1	
36	1229835	Rod—Cross shaft to carb	1	
37	9662122	Washer, ⅜" spring } Rod to	2	
38	9067008	Washer, ⅜" plain } lever	2	
39	1229837	Adaptor—Carb lever	1	
40	19503051	Screw, No. 10 U.N.F. × ⅜"	1	
41	9663122	Washer, ⅜" shakeproof... } Adaptor	1	
42	5220700	Nut, No. 10 U.N.F.	1	
43	1224891	Spring—Accelerator return	1	
44	1224854	Bracket—Accelerator spring anchorage	1	

CARBURETTOR CONTROLS

Plate Ref.	Rootes Part Number	DESCRIPTION	No. per Veh.	REMARKS
ACCELERATOR (L.H.D.)				
45	1224845	ACCELERATOR PEDAL	1	
46	1224849	Bearing bracket—Accelerator shaft	1	
47	9067036	Washer, $\frac{3}{8}$ " plain	1	Not supplied
		Split pin		
48	39313101	Screw, No. 10 UNF. $\times \frac{3}{8}$ " pan hd. cross recess	3	} Accel. bearing bracket to ...
49	9663122	Washer, $\frac{3}{16}$ " shakeproof	3	
50	1224821	Lever—Accelerator pedal shaft	1	
51	19503081	Screw, No. 10 UNF. $\times 1$ "	1	
52	9067009	Washer, $\frac{3}{16}$ " plain	2	} Mk. I
	9660122	Washer, $\frac{3}{16}$ " spring	2	
53	5220700	Nut, No. 10 UNF.	1	} Mk. II
	5220693	Bolt, $\frac{1}{4}$ " UNF. $\times 1\frac{1}{8}$ "	1	
	9067014	Washer, $\frac{1}{4}$ " plain	2	
	5220722	Washer, $\frac{1}{4}$ " spring	2	
	9510040	Nut, $\frac{1}{4}$ " UNF.	1	
54	1224708	Bracket—Accelerator stop	1	
55	1224890	Rubber buffer	1	
56	39313141	Screw, No. 10 UNF. $\times \frac{7}{8}$ " Pan hd. cross recess	1	} Buffer to bracket
57	9067009	Washer, $\frac{3}{16}$ " plain	1	
	5220700	Nut, No. 10 UNF.	1	
	39313101	Screw, No. 10 UNF. $\times \frac{3}{8}$ "	2	} Accelerator stop bracket to firewall
	9663122	Washer, $\frac{3}{16}$ " shakeproof... ..	2	
58	19503101	Screw, No. 10 UNF. $\times 1\frac{1}{4}$ "	1	} Accelerator pedal lever stop ...
	5220700	Nut, No. 10 UNF.	1	
	9067009	Washer, $\frac{3}{16}$ " plain	1	
59	1224853	ACCELERATOR CABLE	1	
	9067009	Washer, $\frac{3}{16}$ " plain	2	
60	9118500	Grommet—Accelerator cable	1	
61	1224797	Abutment—Accelerator cable	1	
62	1224891	Spring—Accelerator return	1	
63	1224854	Bracket } Accelerator	1	Mk. I
	1229919	Bracket } spring anchorage	1	